

SWL IR Remote for Lowe HF-225

Commands Quick Reference for Firmware 1.43

<p>Direct Entry of Frequencies</p> <p>0 8 3 0 Enter 830kHz 0 Mute 7 Enter 700kHz 5 0 0 Mute Enter 500kHz 3 Mute 2 5 9 Enter 3259kHz 1 5 Mute Enter 15000kHz 1 5 Mute 2 3 Mute 5 Enter 15230.5kHz 1 5 2 3 5 Enter 15235kHz 9 5 6 5 Enter 9565kHz 3 Mute 5 Enter 3500kHz Mute (Mute) (Mute) Clear key entry during numeric entry. (LED will blink twice)</p> <p>Frequency and Memory Channel Stepping</p> <table style="width: 100%; border: none;"> <tr> <td></td> <td style="text-align: center;"><u>VFO Mode</u></td> <td style="text-align: center;"><u>Memory Mode</u></td> </tr> <tr> <td>CH+</td> <td>Freq+ by tuning step</td> <td>Memory+</td> </tr> <tr> <td>CH-</td> <td>Freq- by tuning step</td> <td>Memory-</td> </tr> </table>		<u>VFO Mode</u>	<u>Memory Mode</u>	CH+	Freq+ by tuning step	Memory+	CH-	Freq- by tuning step	Memory-	<p>Setting Frequency Pacing (0 9 4 Enter)</p> <p>x x Enter Value from 1 to 99 to control frequency pacing (tuning speed). 1 is the fastest and 99 is the slowest. Default setting is 30.</p>			
	<u>VFO Mode</u>	<u>Memory Mode</u>											
CH+	Freq+ by tuning step	Memory+											
CH-	Freq- by tuning step	Memory-											
<p>Tuning Steps</p> <p>x before CH+/- to set a tuning step (it stays until changed again)</p> <table style="width: 100%; border: none;"> <tr><td>4</td><td>1kHz</td></tr> <tr><td>5</td><td>5kHz</td></tr> <tr><td>6</td><td>10kHz</td></tr> <tr><td>7</td><td>100kHz</td></tr> <tr><td>8</td><td>1MHz</td></tr> <tr><td>9</td><td>9kHz</td></tr> </table> <p>Mute Use the Mute key to clear any partial entries on the display in VFO mode.</p>	4	1kHz	5	5kHz	6	10kHz	7	100kHz	8	1MHz	9	9kHz	<p>Enter Command</p> <p>Enter VFO/Memory mode</p> <p>Memory Management</p> <p>x x Last Select Memory Channel xx (for channels 1 - 10) 0 0 Last Recall last directly entered frequency</p> <p>Note: Press the Enter key on the Universal Remote to switch between VFO and memory mode operation of the SWL IR Remote. If the radio and remote are in the VFO mode, the CH+/- keys step the frequency. If the radio and remote are in the memory mode, the CH+/- keys will step the memory. The remote has no way of knowing if the receiver is in memory or VFO mode, so you will have to be sure the receiver and remote are synchronized. The receiver mode is switched with the "Memory Select" key on the front panel. Press the "Channel" button on the receiver to move selected memory presets to the VFO. You can then step up and down through memories 1-10. The other memories cannot be accessed with the remote due to limitations in the keypad interface.</p> <p>Note: If the display on the HF-225 begins to show single digits when you press the CH+/- keys, you are probably in the memory mode. Press the Enter key and then see if the CH+/- operate as expected.</p>
4	1kHz												
5	5kHz												
6	10kHz												
7	100kHz												
8	1MHz												
9	9kHz												